ClearPath-IP Accessories
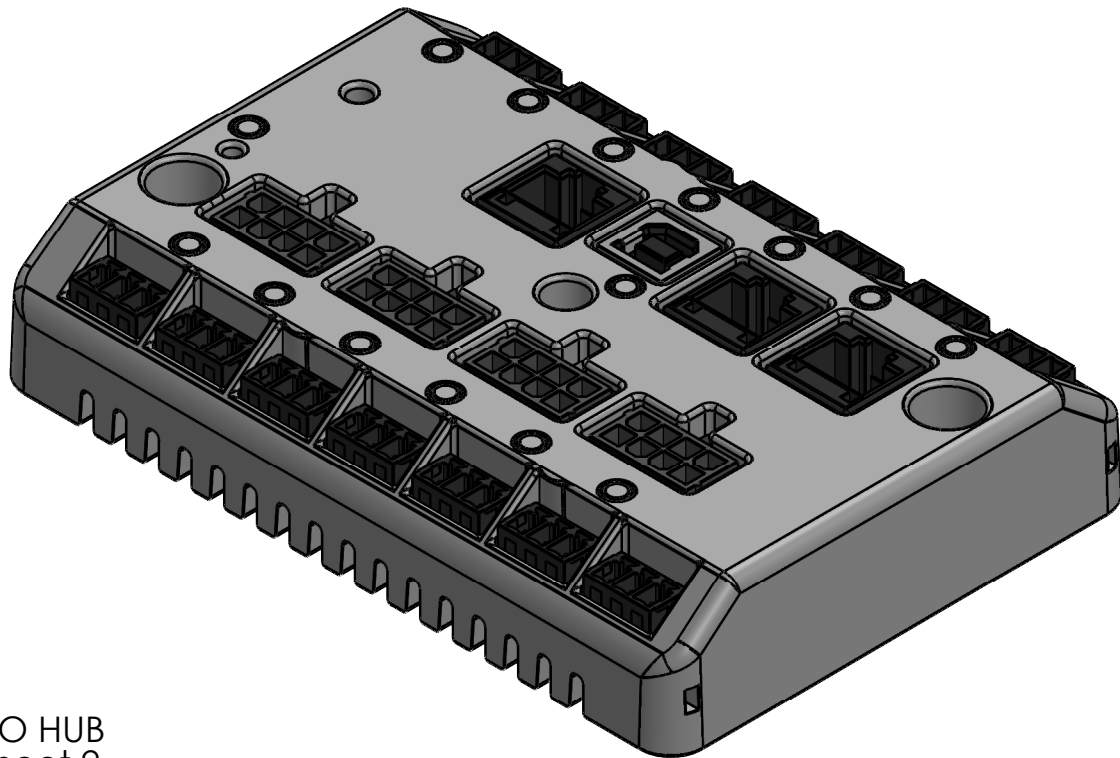
I/O HUB
Sheet 2
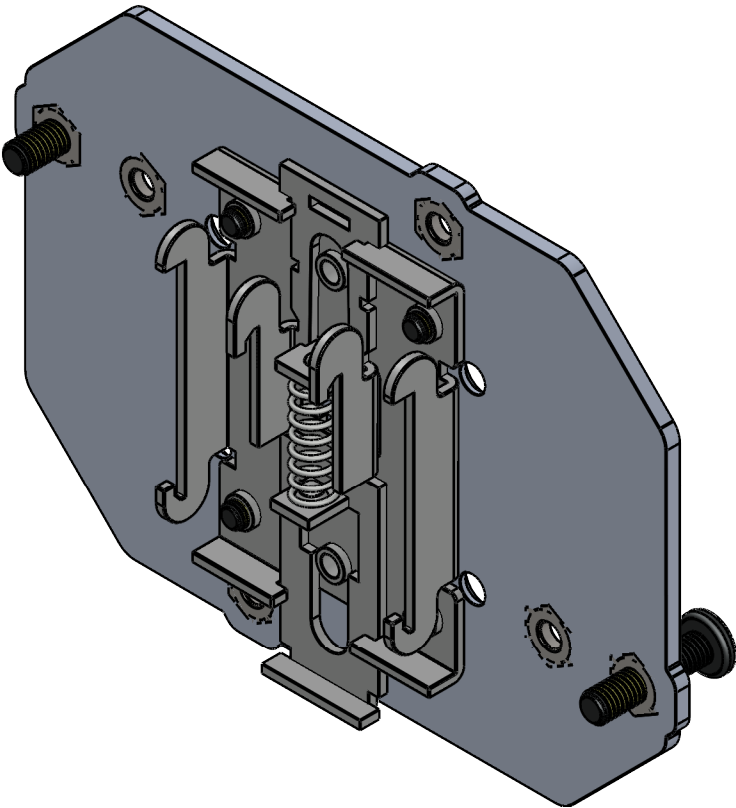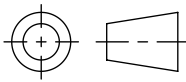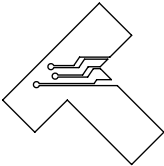
DIN-MNT Mounting Kit
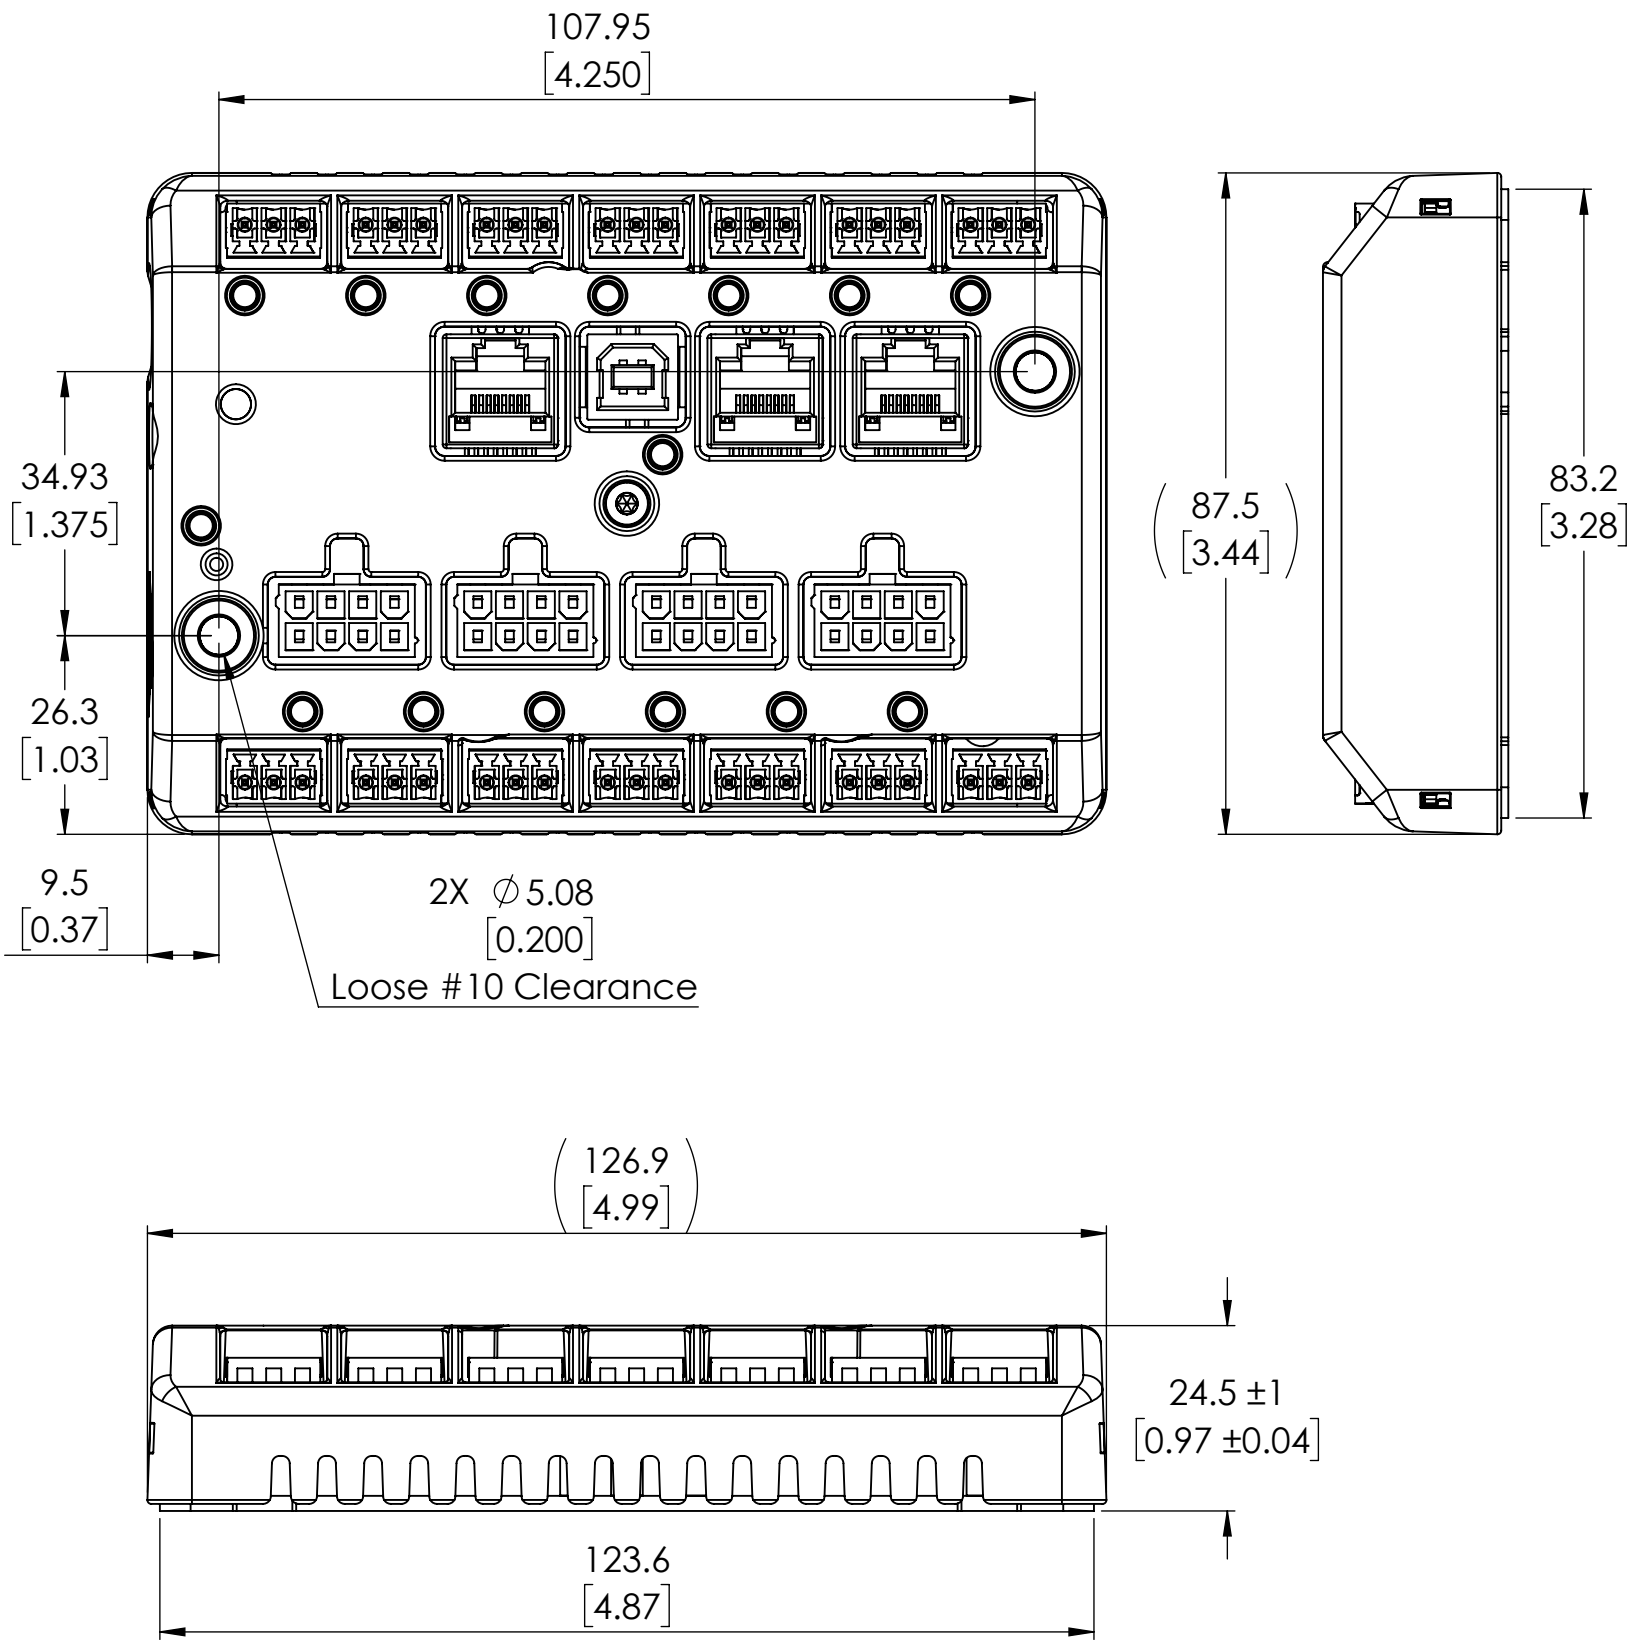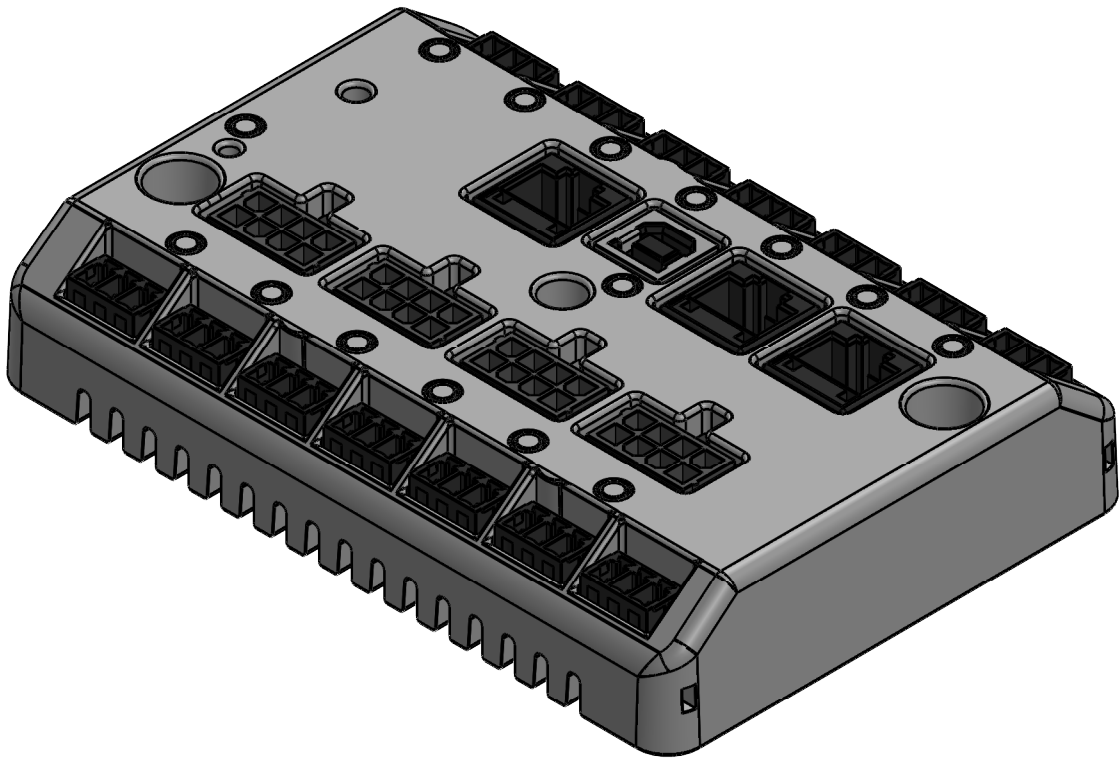Sheet 3

SHEET SCALE 1:1

Third-Angle Projection

Additional documentation including product specifications, up-to-date compliance information, and manuals can be downloaded from Teknic's website.
Visit https://www.teknic.com/ to access that documentation.

I/O HUB
ClearPath-IP I/O and Motor Hub

Part Numbers
IO-HUB-2-R
IO-HUB-4-R
IO-HUB-4-E
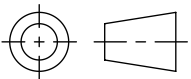
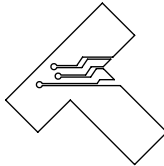All dimensions are in mm [inch] unless otherwise noted.
Sheet Scale 1:1

107.95
[4.250]

87.5
[3.44]

83.2
[3.28]

34.93
[1.375]

26.3
[1.03]

9.5
[0.37]

2X ⌀ 5.08
[0.200]
Loose #10 Clearance

126.9
[4.99]

24.5 ±1
[0.97 ±0.04]

123.6
[4.87]

Unless otherwise specified, untoleranced
dimensions default to:
X.X: ± .5mm [0.020]
X.XX: ± .25mm [0.010]

Third-Angle Projection

DWG. NO./REV **D1268/A**

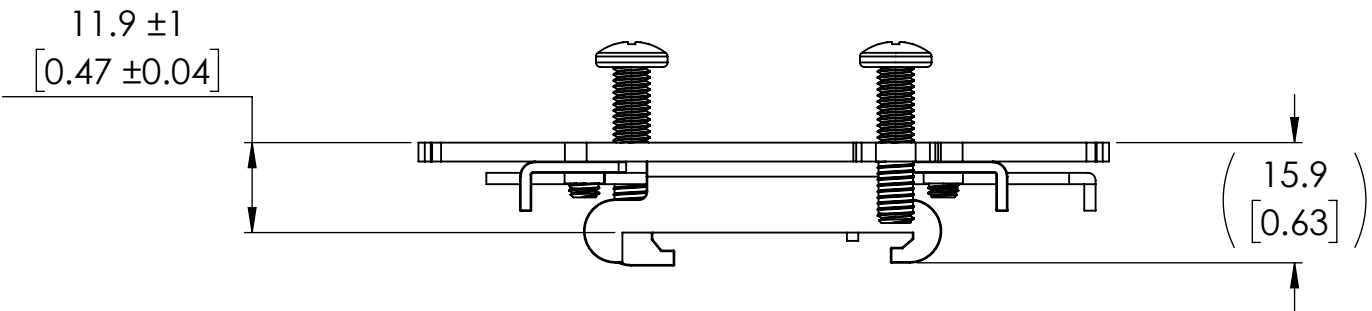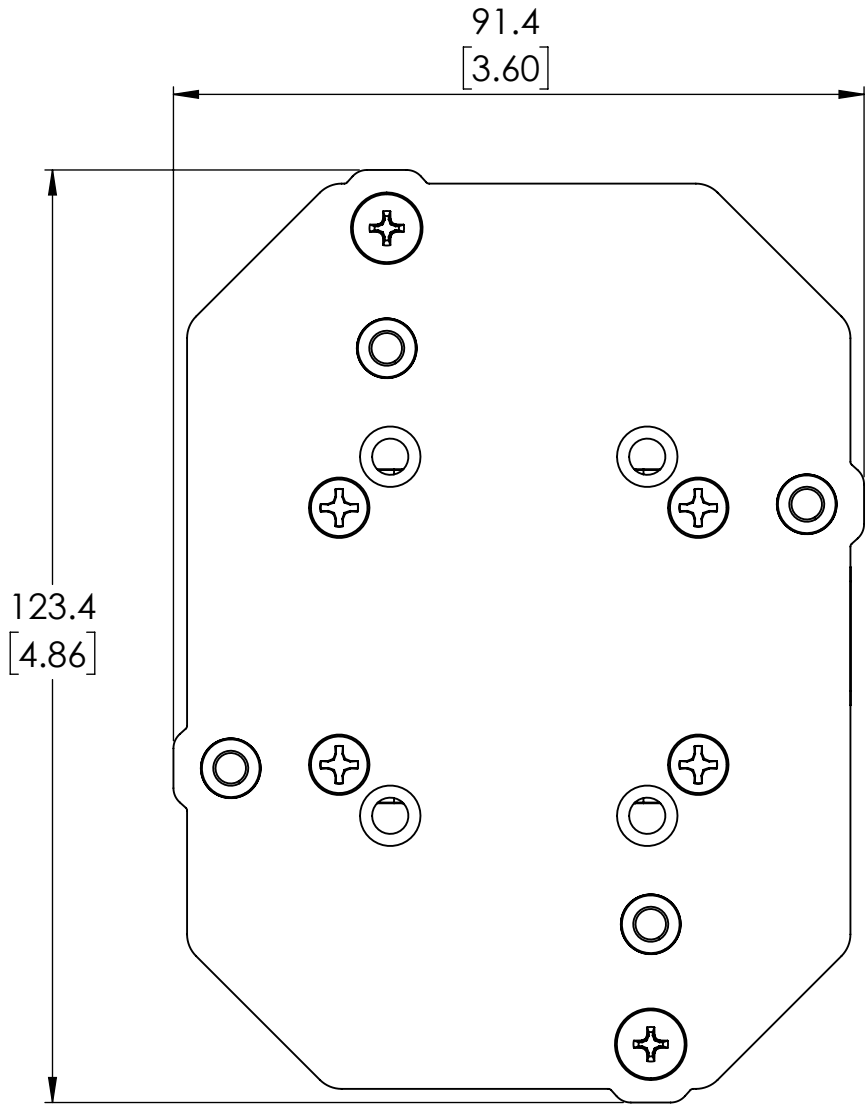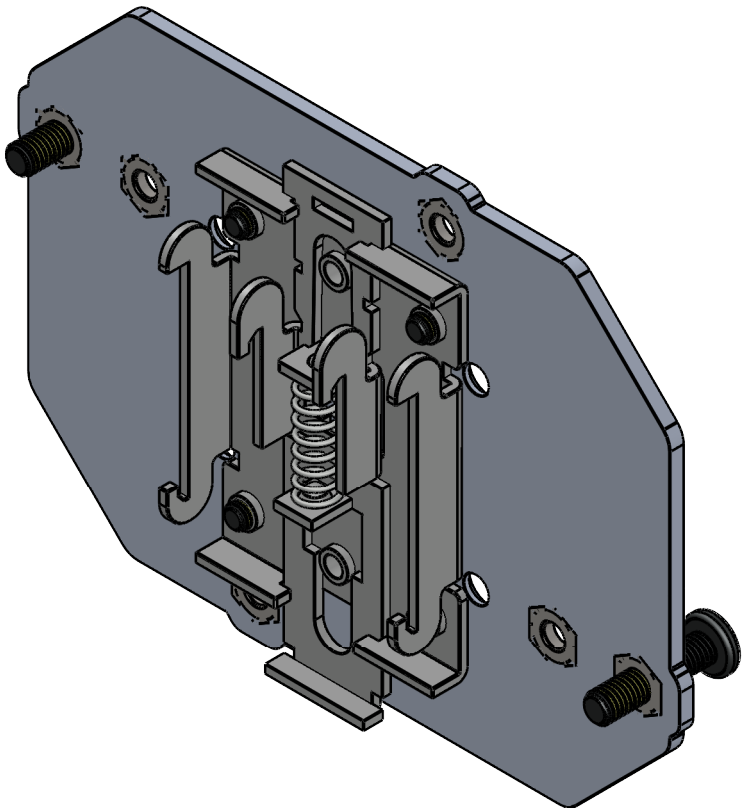TITLE: I/O HUB and Mounting Accessory

Mounting Kit
PN: DIN-MNT

Hardware included: 2 #10-32 x 0.81" Pan Head Screws, 4 M4-.7 x 7mm Flat Head Screws
Mounts I/O Hub to 35mm DIN Rail (not included).

I/O HUB Mounting and Clearance Notes
• Leave a minimum of 1.5" (38.1mm) clearance around all I/O HUB surfaces (except the mounting plate) for appropriate ventilation.
• Provide appropriate clearance for top-mounted cables. Note: some Ethernet and USB cables may require up to 2" clearance."

All dimensions are in mm [inch] unless otherwise noted.
Sheet Scale 1:1

91.4
[3.60]

123.4
[4.86]

11.9 ±1
[0.47 ±0.04]

15.9
[0.63]

Unless otherwise specified, untoleranced dimensions default to:
X.X: ± .5mm [0.020]
X.XX: ± .25mm [0.010]

Third-Angle Projection

Additional documentation including product specifications, up-to-date compliance information, and manuals can be downloaded from Teknic's website.
Visit https://www.teknic.com/ to access that documentation.